
## SPREADER CHAIN SPECIFICATIONS WORKSHEET

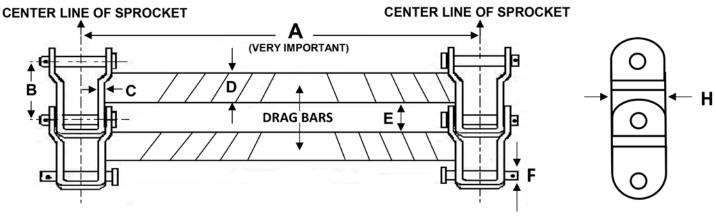

(A) SPROCKET - FROM CENTER LINE TO CENTER LINE =

(in inches)

(B, C & H) CHAIN SIZE (see table below) = (may be stamped on side of chain)

PINTLE CHAIN SIZES (see diagram above)						
(B) PITCH PIN CENTER-TO- CENTER	(C) THICKNESS OF LINK	(H) LINK HEIGHT	(F) PIN DIAMETER	CHAIN SIZE	AVERAGE TENSILE STRENGTH	
1.664	0.125	0.72	0.281	662	8,500 LBS	
2.313	0.125	0.975	0.312	667H	9,500 LBS	
2.250	0.172	0.937	0.437	667X	15,000 LBS	
2.250	0.200	1.060	0.437	667K	20,000 LBS	
2.250	0.224	1.062	0.469	667XH	26,000 LBS	
2.609	0.200	1.060	0.437	88K	20,000 LBS	
2.609	0.250	1.125		88XH	30,000 LBS	

TOTAL LENGTH OF CHAIN (in feet) =		(OR)	TOTA	AL # OF PITCHES	=		
BAR THICKNESS (circle one) = 1/4" (.25")	1/2" (.50'	') 3/8" (.	375")	(D) BAR WIDTH	=		
(E) DISTANCE BETWEEN BARS (edge to edge) =							
BAR SPACING (circle one): EVERY LINK - EVERY OTHER LINK - EVERY THIRD LINK OTHER:							
MAKE OF SPREADER (OPTIONAL)	= _			(1055 505 1551715104	TION PURPOSES ON NO		
MODEL OF SPREADER (OPTIONAL)	= <u> </u>			•	TION PURPOSES ONLY)		
OEM CHAIN PART # (OPTIONAL)	= _			(USED FOR IDENTIFICA	TION PURPOSES ONLY)		
				(USED FOR IDENTIFICA	TION PURPOSES ONLY)		



Transmit this worksheet to Lacal Equipment via fax or email, or call one of our sales representatives directly for assistance. We want to make sure the spreader chain you order is the exact one you need.

LACAL **PART NUMBER:** 

61 • FAX: 937.596.5433 • EMAIL: sales@lacal.c	FAX: 937.596.543	HONE: 800.543.6161 •
---	------------------	----------------------

Submitted by:			
	NAME PRINTED	SIGNATURE	CONTACT PHONE